

## SECTION 4

### NAVIGATION SYSTEM: MEMORY POINTS

#### Navigation system: Memory points


• Navigation settings	110
Setting up the "Home" .....	111
Setting up the "Preset Destinations" .....	113
Setting up the "Address Book" .....	116
Setting up the "Areas to Avoid" .....	122
Deleting previous destinations .....	127

## Navigation settings —

Points or areas on the map can be registered.

The registered points can be used on the “Destination” screen. (See “ — Destination search by Home” on page 64, “ — Destination search by Preset destinations” on page 64 and “ — Destination search by “Address Book”” on page 77.)

Registered areas are avoided at the time of route search.

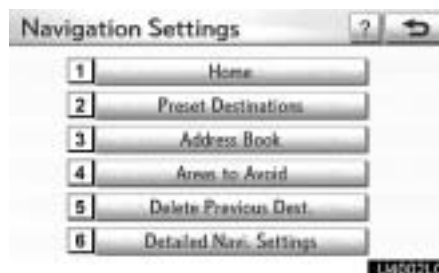


On this screen, the following operations can be performed.

No.	Function
1	<b>Sets home</b> (See page 111.)
2	<b>Sets preset destinations</b> (See page 113.)
3	<b>Sets address book</b> (See page 116.)
4	<b>Sets area to avoid</b> (See page 122.)
5	<b>Deletes previous destinations</b> (See page 127.)
6	<b>Detailed navigation settings</b> (See page 305.)



1. Push the “SETUP” button.

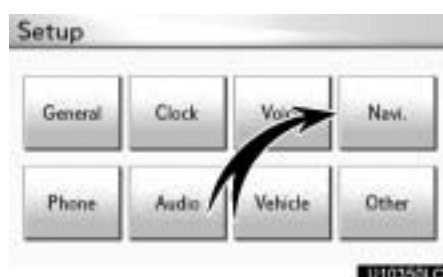

2. Touch “Navi.”.

## — Setting up the “Home”

If home has been registered, that information can be recalled by using “Go Home” on the “Destination” screen. (See “— Destination search by Home” on page 64.)

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.



3. Touch “Home”.



- Registering home (See page 111.)
- Editing home (See page 112.)
- Deleting home (See page 113.)

### (a) Registering home

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.
3. Touch “Home” on the “Navigation Settings” screen.



4. Touch “Set Home”.



5. Enter the location in the same way as for a destination search. (See “Destination search” on page 62.)

## NAVIGATION SYSTEM: MEMORY POINTS

When registration of home is completed, the "Edit Home" screen will be displayed.



**6. Touch "OK".**

To edit registered information, see "(b) Editing home" on page 112.

**(b) Editing home**

1. Push the "SETUP" button.

2. Touch "Navi." on the "Setup" screen.

3. Touch "Home" on the "Navigation Settings" screen.



**4. Touch "Edit".**



**5. Touch "Edit" for the item you want to change.**

"Name": To edit home name. The names can be displayed on the map. (See page 120.)

"Location": To edit location information. (See page 121.)

"Phone #": To edit telephone numbers. (See page 121.)

"Icon": To select icons to be displayed on the map. (See page 119.)

**6. Touch "OK".**

(c) Deleting home

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.
3. Touch “Home” on the “Navigation Settings” screen.



4. Touch “Delete”.
5. To delete home, touch “Yes”. To cancel the deletion, touch “No”.

— Setting up the “Preset Destinations”

If preset destination has been registered, that information can be recalled by using “Preset Destination” on the “Destination” screen. (See “— Destination search by Preset destinations” on page 64.)

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.



3. Touch “Preset Destinations”.




- Registering preset destination (See page 114.)
- Editing preset destination (See page 115.)
- Deleting preset destination (See page 116.)

### (a) Registering preset destinations


1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Preset Destinations" on the "Navigation Settings" screen.



4. Touch "Set".

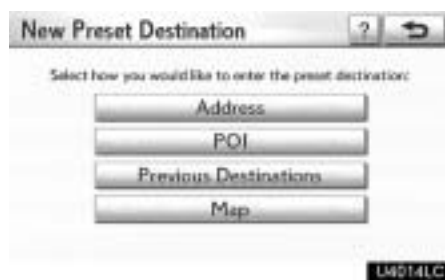

5. Enter the location in the same way as for a destination search. (See "Destination search" on page 62.)

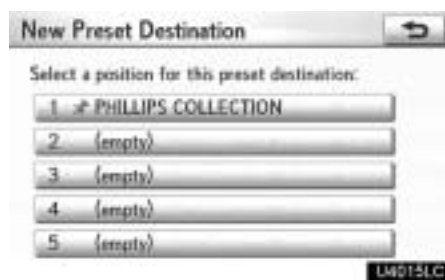

6. Touch a position for this preset destination.

When registration of preset destination is completed, the "Edit Preset Destination" screen will be displayed.



7. Touch "OK".


To edit registered information, see "(b) Editing preset destinations" on page 115.

(b) Editing preset destinations

1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Preset Destinations" on the "Navigation Settings" screen.



4. Touch "Edit".

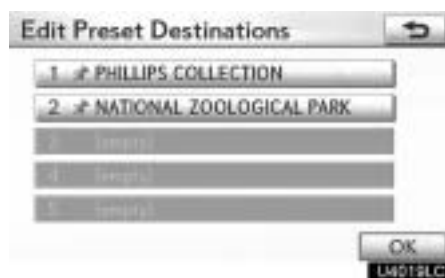

5. Touch the button of the desired preset destination.



6. Touch "Edit" for the item you want to change.

"Name": To edit preset destination names. The names can be displayed on the map. (See page 120.)

"Location": To edit location information. (See page 121.)

"Phone #": To edit telephone numbers. (See page 121.)

"Icon": To select icons to be displayed on the map. (See page 119.)


7. Touch "OK".

(c) Deleting preset destinations

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.
3. Touch “Preset Destinations” on the “Navigation Settings” screen.



4. Touch “Delete”.

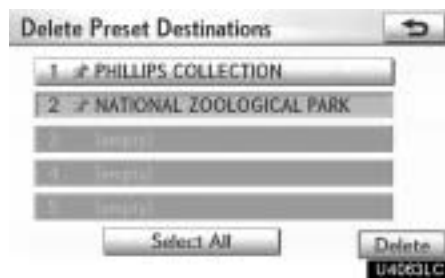

5. Touch the preset destination for deletion.

“Select All”: To select all preset destinations on the list.

“Unselect All”: To unselect all of the selected preset destinations.

6. Touch “Delete”.

7. To delete preset destination, touch “Yes”. To cancel the deletion, touch “No”.


## — Setting up the “Address Book”

Points or areas on the map can be registered.

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.



3. Touch “Address Book”.

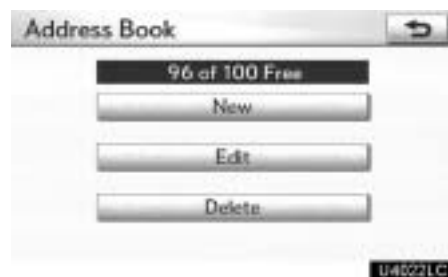


- Registering address book entries (See page 117.)
- Editing address book entries (See page 118.)
- Deleting address book entries (See page 122.)




(a) Registering address book entries

1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Address Book" on the "Navigation Settings" screen.

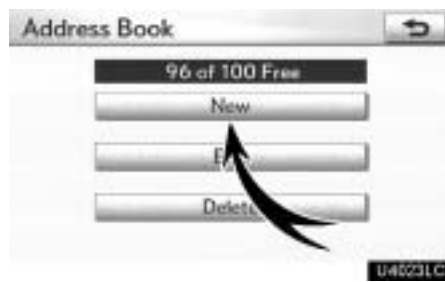


4. Touch "New".

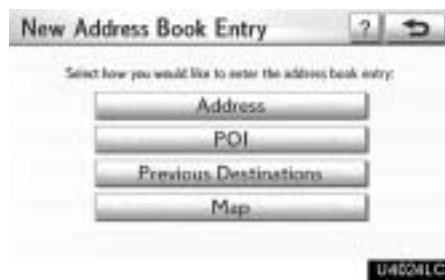

5. Enter the location in the same way as for a destination search. (See "Destination search" on page 62.)

After the address book entry has been registered, the "Edit Address Book Entry" screen will be displayed.

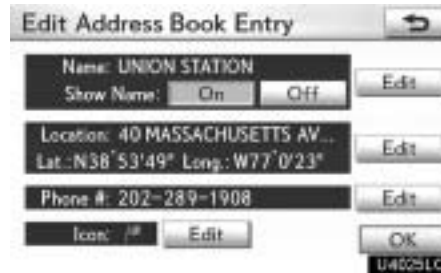

6. Touch "OK".

To edit registered information, see "(b) Editing address book entries" on page 118.


**INFORMATION**

*Up to 100 address book entries can be registered.*


### (b) Editing address book entries

The icon, name, location and/or telephone number of a registered address book entry can be edited.


1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.
3. Touch “Address Book” on the “Navigation Settings” screen.

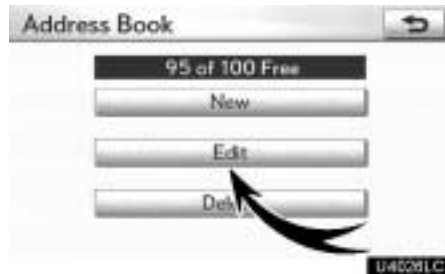

4. Touch “Edit”.

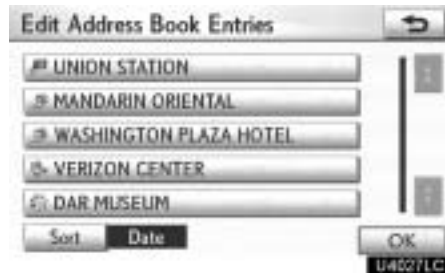

5. Touch the button of the desired address book entry.

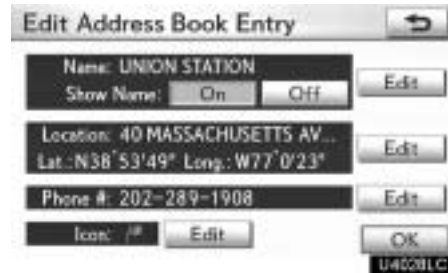

6. Touch “Edit” for the item you want to change.

“Name”: To edit address book entry names. The names can be displayed on the map. (See page 120.)


“Location”: To edit location information. (See page 121.)

“Phone #”: To edit telephone numbers. (See page 121.)


“Icon”: To select icons to be displayed on the map. (See page 119.)

7. Touch “OK”.

- To change “Icon”

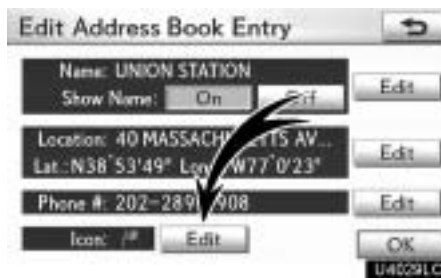

1. Touch “Edit” of “Icon”.

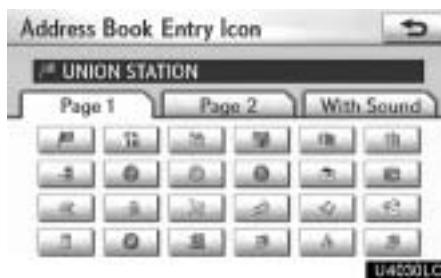


2. Touch the desired icon.

Change pages by touching “Page 1”, “Page 2” or “With Sound” tab.

## SOUND ICONS

You can set a sound for some address book entries. When the vehicle approaches the location of the address book entry, the selected sound will be heard.


1. Touch “With Sound” on the “Address Book Entry Icon” screen.

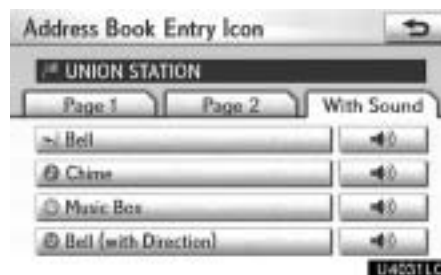

2. Touch the desired sound icon.

The next screen appears when “Bell (with Direction)” is touched.




Touch either  or  to adjust the direction. Touch “OK”.


The bell sounds only when the vehicle approaches this point in the direction that has been set.

## NAVIGATION SYSTEM: MEMORY POINTS

- To change “Name”

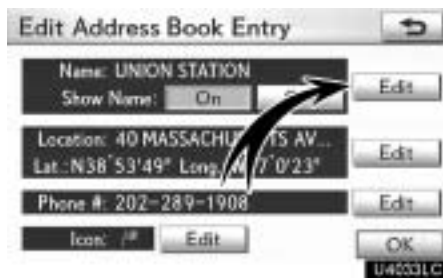

1. Touch “Edit” of “Name”.

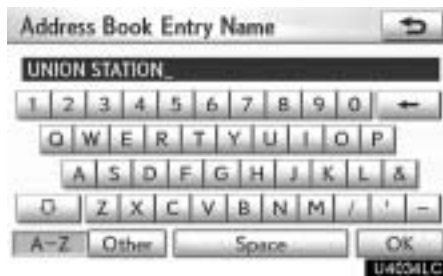

2. Enter the name using the alphanumeric keys.


Up to 32 characters can be entered.

3. Touch “OK”.

The previous screen will be displayed.


### DISPLAYING MEMORY POINT NAMES

The name of an address book entry can be set to display on the map.

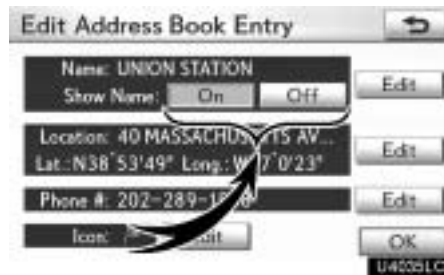

To show the name, touch “On” on the “Edit Address Book Entry” screen. To not show it, touch “Off”.

- To change “Location”

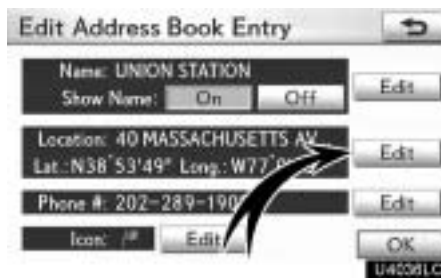


1. Touch “Edit” of “Location”.




2. Touch one of the 8 directional buttons to move the cursor to the desired point on the map.
3. Touch “OK”.

The previous screen will be displayed.

- To change “Phone #” (telephone number)

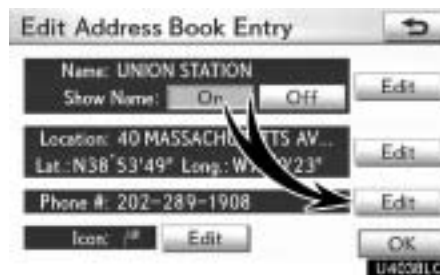

1. Touch “Edit” of “Phone #”.

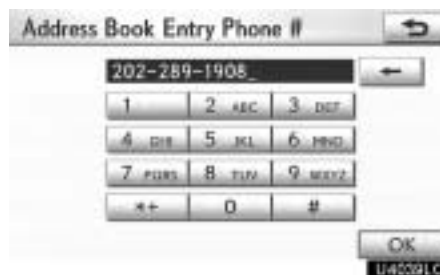


2. Enter the number using number keys.
3. Touch “OK”.


The previous screen will be displayed.

(c) Deleting address book entries

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.
3. Touch “Address Book” on the “Navigation Settings” screen.

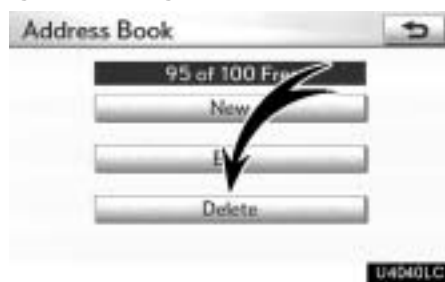

4. Touch “Delete”.

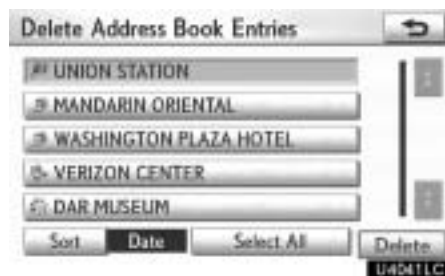

5. Touch the button to be deleted.

“Select All”: To select all addresses in the address book.

“Unselect All”: To unselect all of the selected addresses.

6. Touch “Delete”.

7. To delete the address book entry, touch “Yes”. To cancel the deletion, touch “No”.

## — Setting up the “Areas to Avoid”

Areas you want to avoid because of traffic jams, construction work or other reasons can be registered as areas to avoid.

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.



3. Touch “Areas to Avoid”.



- Registering areas to avoid (See page 123.)
- Editing areas to avoid (See page 124.)
- Deleting areas to avoid (See page 127.)

(a) Registering areas to avoid

1. Push the "SETUP" button.
2. Touch "Navi." on the "Setup" screen.
3. Touch "Areas to Avoid" on the "Navigation Settings" screen.



4. Touch "New".



5. Enter the location in the same way as for a destination search, or display the map of the area to be avoided. (See "Destination search" on page 62.)





6. Scroll the map to the desired point.

"Adjust Location": To adjust the position in smaller increments.

7. Touch "Enter".

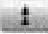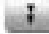

8. Touch either  or  to change the size of the area to be avoided.

9. Touch "OK".

**INFORMATION**

- If a destination is input in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to be avoided may be shown.
- Up to 10 locations can be registered as points/areas to avoid.


### (b) Editing area to avoid

The name, location and/or area size of a registered area can be edited.


1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.
3. Touch “Areas to Avoid” on the “Navigation Settings” screen.



4. Touch “Edit”.

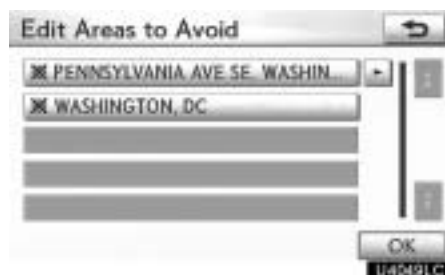

5. Touch the desired area button.

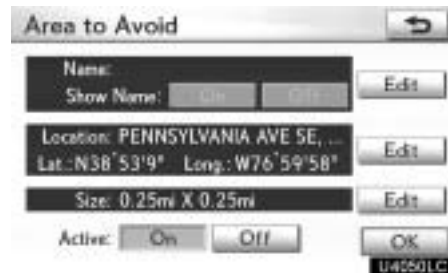

6. Touch “Edit” for the item you want to change.

“Name”: To edit the name of the area to avoid. The names can be displayed on the map. (See page 125.)

“Location”: To edit area location. (See page 126.)


“Size”: To edit area size. (See page 126.)

“Active”: To turn on or off the area to avoid feature. To turn on the feature, touch “On” on the “Edit Area to Avoid” screen. To turn off the feature, touch “Off” on the “Edit Area to Avoid” screen.

7. Touch “OK”.



- To change “Name”

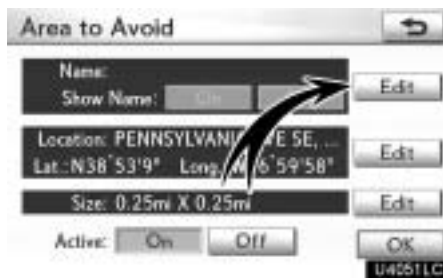

1. Touch “Edit” of “Name”.



2. Enter the name using alphanumeric keys.


Up to 32 characters can be entered.

3. Touch “OK”.

The previous screen will be displayed.

## DISPLAYING NAMES OF AREAS TO BE AVOIDED


The name of an area to be avoided that may be displayed on the map can be set.

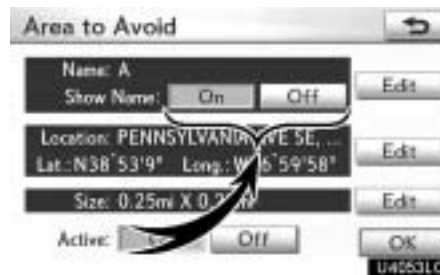

To show the name, touch “On” on the “Area to Avoid” screen. To not show it, touch “Off”.


## NAVIGATION SYSTEM: MEMORY POINTS

- To change “Location”

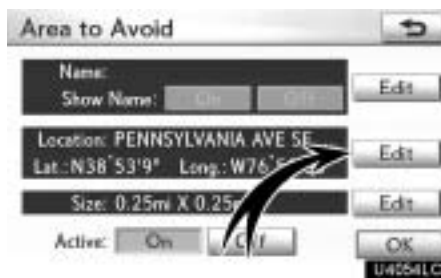

1. Touch “Edit” of “Location”.

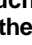


2. Touch the 8 directional button to move the cursor  to the desired point on the map.

3. Touch “OK”.



The previous screen will be displayed.

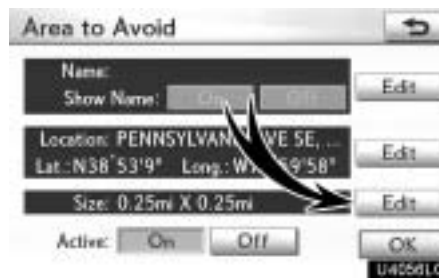- To change “Size”



1. Touch “Edit” of “Size”.



2. Touch either  or  to change the size of the area to be avoided.

3. Touch “OK”.


The previous screen will be displayed.

(c) Deleting areas to avoid

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.
3. Touch “Areas to Avoid” on the “Navigation Settings” screen.



4. Touch “Delete”.

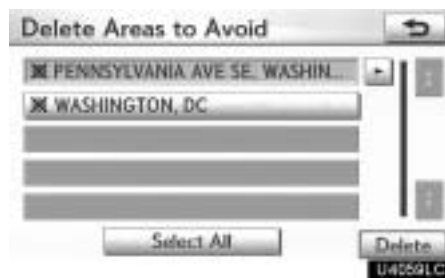

5. Touch the button to be deleted.

“**Select All**”: To select all registered areas to avoid in the system.

“**Unselect All**”: To unselect all registered areas to avoid in the system.

6. Touch “Delete”.

7. To delete the area, touch “Yes”. To cancel the deletion, touch “No”.

## — Deleting previous destinations

The previous destination can be deleted.

1. Push the “SETUP” button.
2. Touch “Navi.” on the “Setup” screen.



3. Touch “Delete Previous Dest.”.



4. Touch the button you want to delete.

“**Select All**”: To select all previous destinations in the system.

“**Unselect All**”: To unselect all previous destinations in the system.

5. Touch “Delete”.

## NAVIGATION SYSTEM: MEMORY POINTS

---



6. To delete the destination, touch "Yes". To cancel the deletion, touch "No".